

TRAMIGO

MISSION CRITICAL PUSH-TO-TALK

QUICK START GUIDE

TRAMIGO
MCPTT-1

XC



IP68



1 Rotary knob for switching groups

- Rotate to switch between the groups

2 Antenna

3 Speaker

4 Microphone

5 Display

6 Power on/off key


- Hold the power button for 3 seconds to turn on/off the device
- Wakes up the screen in sleep mode. The sleep mode timer of the screen is set to 5 minutes by default. Device remains fully operational when the screen is in the sleep mode.

7 User navigation keys

- Press up or down to navigate and select individual users for 1-1 calls

8 Back to group call

- Return to group call after 1-1 calls

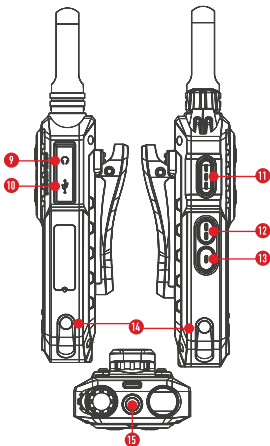

- 9 Earpiece port**
 - 3.5mm port
 - Earpiece is an optional accessory, sold separately
- 10 Charger input for charging cable**
 - USB-C charging port
- 11 PTT (Push-To-Talk)**
 - Hold the PTT button to start speaking, release when finished
- 12 Volume up** **13 Volume down**
- 14 Port for desktop charger**
 - Desktop charger is an optional accessory, sold separately
- 15 SOS button**
 - Sends SOS alert to App-Based Mobile Dispatcher or Mission Critical Group Communication Windows Dispatcher

ATTACHING THE ANTENNA

2

1. Align the bottom of the antenna and the screw-in base on the top of the PTT
2. Turn clockwise until snug. Do not force

Note: Do not insert a SIM card into the device. The Tramigo MCPTT-1-XC comes with pre-installed Tramigo embedded connectivity.



CHARGING THE DEVICE

3

Some of our MCPTT-1-XC units come pre-charged. However, if your device is not pre-charged, plug the charging cable into the USB port.

Alternatively, you can charge the device with a desktop charger (sold separately).




GETTING STARTED

4

Hold the power button for 3 seconds to turn on the device.

Hold the PTT with the microphone around 10 centimeters away from your mouth



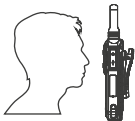

- Press the PTT button to initiate a call
- Speak into the microphone
- Listen via the PTT speaker or earphone
- In a noisy environment, move the PTT closer for better communication



STARTING A ONE-TO-ONE CALL

5

This is a simple PTT session involving just one caller and one recipient.

1. At the main menu locate groups by rotating the knob. Users are shown at the bottom window of the display as usernames
2. Use the navigation keys  to scroll the user list
3. Press the PTT button  to start a one-to-one call with the selected individual
4. Press the Volume +/- button  to adjust the audio volume level
5. Press the OK button  to go back to the group interface



Note: Tramigo's MCPTT-1-XC screen will go to sleep mode after 5 minutes of inactivity. Use the power on/off key to wake up the screen. You can still use the unit perfectly with the screen off, which will save battery and extend the unit's operational hours.

LOOKING AFTER YOUR MCPTT-1-XC

6

- Never leave your MCPTT-1-XC or battery in extreme temperatures (over +85°C), such as behind a windscreen in direct sunlight.
- To clean your MCPTT-1-XC, use a moistened or antistatic cloth.



QUICK START GUIDE

More information on
Tramigo MCPTT-1-XC
visit the

Tramigo website at:

tramigo.com

Feature user guide and
related documentation
available upon request

customercare@tramigo.com

©Tramigo copyright 2024.
All rights reserved.

Complete solution designed in Finland